

PX787

DMX / DALI 1x

User manual



Table of Contents

1 Description.....	4
2 Safety conditions.....	5
3 Connectors and control elements.....	7
4 Programming using buttons.....	8
4.1 Navigating the menu.....	8
4.2 Description of information parameters.....	9
4.3 DALI line settings.....	9
4.4 DMX → DALI settings.....	12
4.4.1 <i>No Signal function</i>	12
4.4.2 <i>Assigning DMX channels to DALI addresses</i>	13
4.5 Digital inputs.....	14
4.6 Converter network settings.....	17
4.7 Other parameters.....	18
4.7.1 <i>Dark mode</i>	19
4.7.2 <i>Reboot the device</i>	19
4.7.3 <i>Restore default settings</i>	20
4.7.4 <i>PIN code protection</i>	21
4.8 Setting the display contrast.....	22
4.9 Menu scheme in PX787.....	23
5 Connecting to the PC.....	24
5.1 Change of the computer network configuration.....	25
5.2 Connecting converter directly to the PC.....	28
5.3 Connecting the converter using a router.....	28
5.3.1 <i>Automatic addressing</i>	29
5.3.2 <i>Static addressing</i>	30
6 WWW interface.....	31
6.1 WWW window structure.....	32
6.2 Preview of DALI and DMX channels.....	34
6.3 DALI Bus.....	35
6.3.1 <i>Actions available for ballasts</i>	37
6.3.2 <i>Copy settings</i>	43
6.4 Patching.....	44

6.5 Inputs.....	47
6.6 Administration.....	49
7 Remote connection.....	51
7.1.1 One converter in the internal network.....	53
7.1.2 More than one converter in the internal network.....	56
8 RDM – available parameters.....	58
9 Indication lights.....	60
10 DMX signal connecting.....	60
11 Connection scheme.....	61
12 Dimensions.....	62
13 Technical data.....	63

Manufacturer reserves the right to make modifications in order to improve device operation.

PXM Marek Żupnik sp.k.
Podłęże 654
32-003 Podłęże
BDO register number 000005972

tel. +48 12 385 83 06
mail: info@pxm.pl
www.pxm.pl

Rev.3-0
30.11.2023

1 Description

PX787 is a DMX-512 control signal converter for DALI protocol and the DALI line programmer.

DMX / DALI 1x is an advanced converter that allows to combine lighting installations based on the DALI protocol with DMX-512 control system. Using the PX787, you can connect devices working in the DALI protocol to the controller sending the DMX-512 signal.

The device is equipped with two DMX (in / out) ports and one DALI port which allows to connect up to 64 devices – in accordance with the DALI standard. The converter also supports four digital inputs, from which you can set such actions as: turn on / off, set the scene or set the brightness.*

Managing PX787 settings is possible by means of buttons and screen or by means of a built-in Web Server. Changing the settings includes:

- searching for DALI devices,
- change of ballast parameters (e.g.: brightness, address, “fade time”, “fade rate”, etc.),
- changing the conversion settings from DMX to DALI,
- change of converter network settings,
- firmware upgrade.

Moreover, the RDM protocol was implemented in the PX787.

DMX / DALI 1x has been placed in a housing adapted for mounting on a 35mm DIN rail and is supplied with 12 – 24V DC safe voltage. Please note that the DALI line must have external power supply.

* – support for external keys is available from serial number 21030041

NOTE! From the serial number 22020242 the system of power and DMX signal connectors has been changed.


2 Safety conditions

PX787 is a device powered with safe voltage 12 – 24V DC; however, during its installation and use the following rules must be strictly observed:

1. The device may only be connected to 12 – 24V DC with current-carrying capacity compatible with technical data.
2. All the conductors should be protected against mechanical and thermal damage.
3. In the event of damaging any conductor, it should be replaced with a conductor of the same technical data.
4. Connection of DMX signal can only be made with shielded conductor.
5. All repairs and connections of outputs or DMX signal can only be made with cut off power supply.
6. The PX787 should be strictly protected against contact with water and other liquids.
7. All sudden shocks, particularly dropping, should be avoided.

8. The device cannot be turned on in places with humidity exceeding 90%.
9. The device cannot be used in places with temperature lower than +2°C or higher than +40°C.
10. Clean with damp duster only.


3 Connectors and control elements

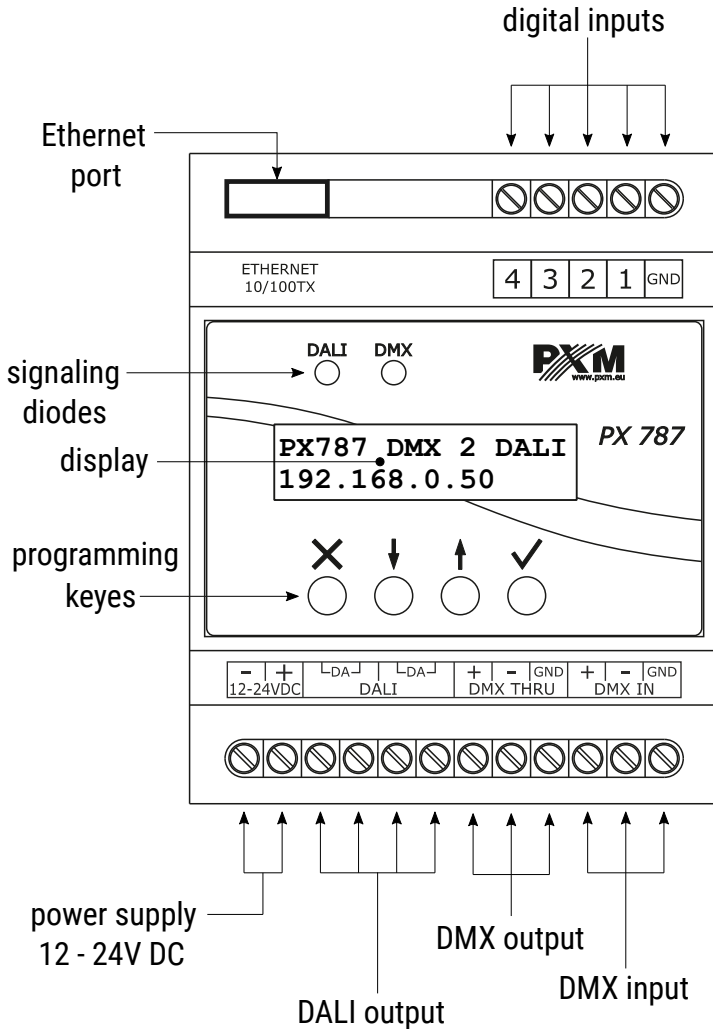

4 Programming using buttons

4.1 Navigating the menu

- ✕ (escape) - allows to exit the parameter being programmed without saving any changes or to move to a higher menu level
- ↓ (previous) - scrolls the menu up or reduces the values to be set
- ↑ (next) - scrolls the menu down or increases the values to be set
- ✓ (enter) - allows to enter the programming mode and confirm the values set


If the parameter is editable, the edit symbol  is in the lower right corner, and ✓ causes the transition to the edition of the first field. The field that is being edited is indicated by the arrow ← and the buttons ↓ / ↑ change the value of the field. The ✓ button causes the transition to the next field or saving the value and exiting the parameter edition.

The → symbol informs about the possibility of entering the parameter edition tree.

4.2 Description of information parameters

On-screen menu allows to read information parameters related to the converter, such as:

- individual converter name and current IP address (if the IP address is assigned from DHCP, the "*" symbol is added) alternating with information about the signal conversion status and the DALI bus,
- information about the DALI line power supply (*Bus power*),
- number of ballasts found by PX787 (e.g. 8 – *Found ballasts*),
- converter serial number (*S/N*) and installed software version (*FW*),
- individual MAC address of the device (*Ethernet MAC*).

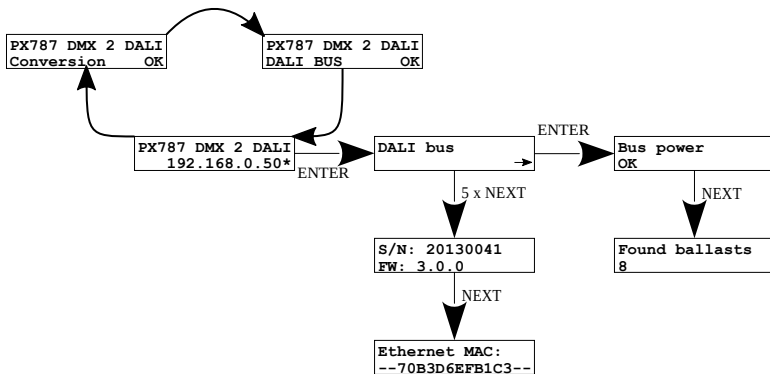


4.3 DALI line settings

Using the screen and buttons, it is possible to search for ballasts, enable or disable signal conversion and set the DALI line priority.

Following options are available:

- ***Initialize*** – searching for and re-addressing ballasts connected to the converter,
NOTE! The ***Initialize*** option will cause the loss of current ballast addressing.
- ***Search*** – searching for ballasts connected to the converter without interfering with their address settings,
- ***Ballast test*** – the option allows to control all ballasts (*Broadcast*), individual ballasts (*Ballast A00 – Ballast A63*) or groups (*Group G00 – Group G15*). This may be useful for testing the connection on the DALI line between the PX787 and the ballasts.
To enable the ballast test, activate the *Enter* button (*Enabled*).
- ***Conv. enabled*** – switching on or switching on the conversion of DMX signal to DALI.
NOTE! After restarting the device, signal conversion automatically turns on.
- ***Frame priority*** – DALI line access priority:
 - **1** – highest,
 - **2** – high,
 - **3** – medium,
 - **4** – low,
 - **5** – lowest.

When the user chooses one of the above-mentioned options, (*Are you sure?*) will appear on the display. Pressing the ✓ button will confirm the selected option and the device will execute it, while pressing the ✕ button will exit the selected option without searching / re-addressing the devices.

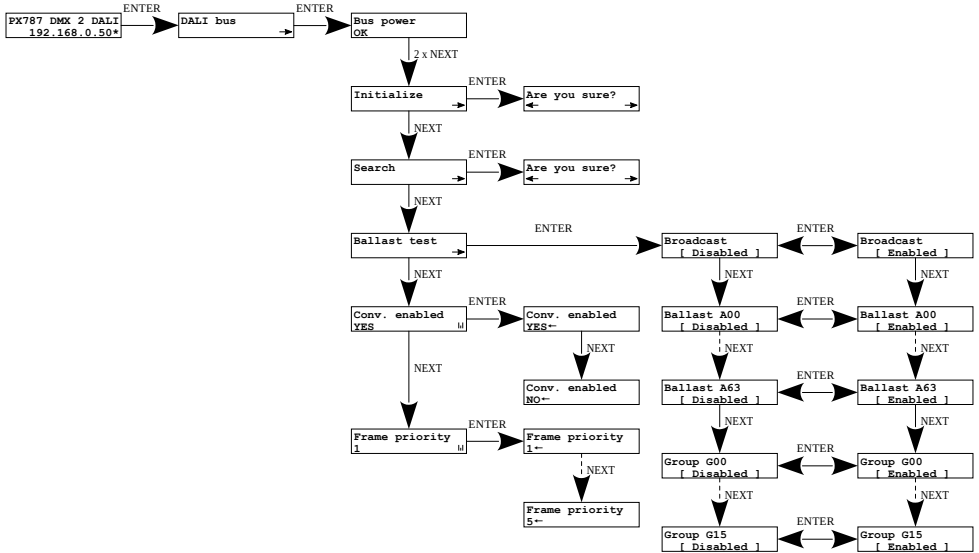

NOTE! After connecting the PX787 to an existing installation (the ballasts are addressed), select the *Search* option – it will not change the ballasts addresses. If the ballasts in the installation do not have assigned addresses – select the *Initialize* option.


4.4 DMX → DALI settings

4.4.1 No Signal function

In the **No DMX signal** menu, you can set the behavior of the converter in case of DMX signal loss.

Possible options to choose from:

- **ON** – switching on all ballasts at 100%,
- **OFF** – complete switching off of all ballasts,
- **HOLD** – holding the last value before the DMX signal disappear,
- **VALUE** – set value in the range 0 – 255.

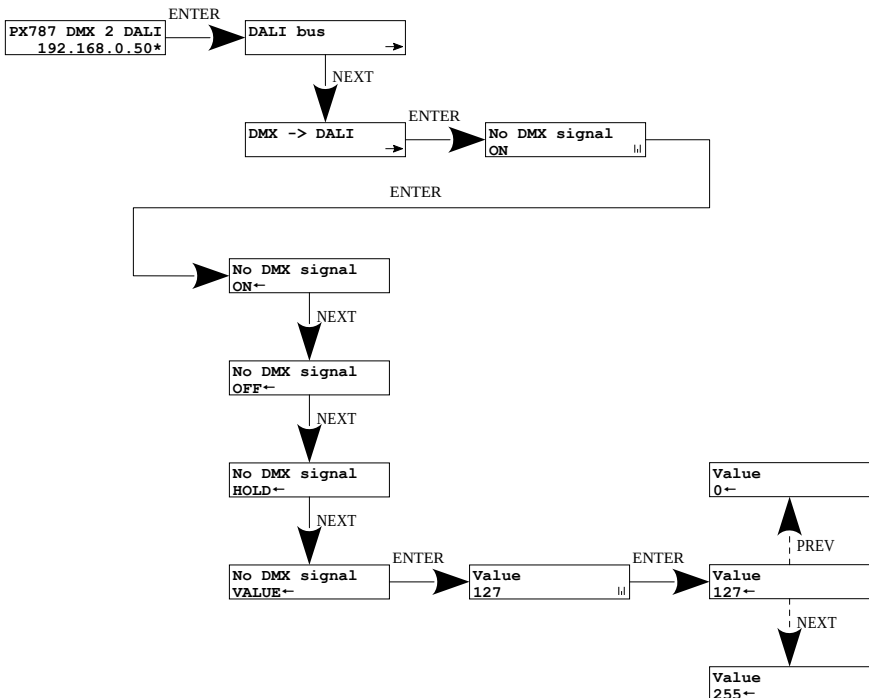

Reconnecting the DMX signal will interrupt the option being realized and the device will convert the DMX signal.

NOTE! After reconnecting the DMX signal to the converter, the DALI command will be sent to all devices (*Broadcast*) first, then the groups will be controlled, and finally each ballast individually.


4.4.2 Assigning DMX channels to DALI addresses

In order to assign DMX addresses to DALI addresses, enter the **DMX -> DALI** option.

In this menu you can assign a DMX channel to:

- **DALI Broadcast** – DMX channel that will control all available ballasts ("broadcast signal"),
- **DALI Address** – an individual DMX channel for each DALI address,
- **DALI Group** – an individual DMX channel for each DALI group.

Each assignment entered via the LCD screen is treated as a fluorescent lamp with a DALI control curve.

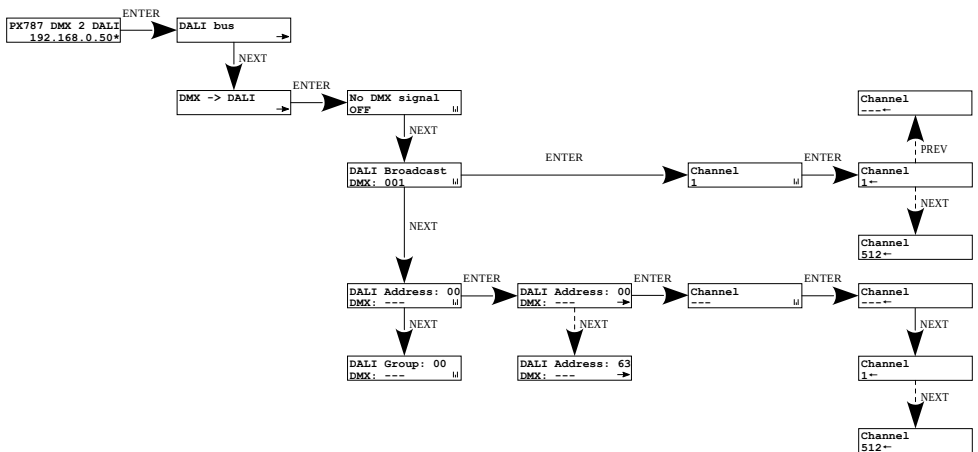

NOTE! Symbol --- next to DMX channels informs that no DMX channel has been assigned to the given DALI address, group or broadcast channel.

4.5 Digital inputs


Starting from the device with the serial number 21030041, support for up to 4 digital inputs is available.

In the **Inputs** menu, each of the digital inputs can be individually assigned its operating parameters:

- **Active** – defines whether the digital input is to be active, two states are **YES / NO**,
- **Ignore when DMX** – if this option is on, the digital input works only when the DMX signal is unavailable, two states are **YES / NO**,
- **Action**
 - **ON / OFF** – pressing the button turns on or off the ballast / group / broadcast channel defined in **Target** – *Fade time* affects the

smoothness of switching on and off. Switching on returns to the state before switching off – memory function.


- **GO TO SCENE** – pressing the button turns on or off the scene (0 – 15) defined in the **Target** ballast / group / broadcast channel,
- **SET LEVEL** – pressing the button switches on or off the brightness set by the user (0 – 254) defined in the **Target** of the ballast / group / broadcast channel,
- **Target**
 - **BALLAST** – the button applies to one ballast (1 of 0 – 63),
 - **GROUP** – the button applies to one of the groups (1 of 0 – 15),
 - **BROADCAST** – the button applies to all selected ballasts,
- **Dimming** – if this option is enabled, holding down the button will lighten or darken, two states are **YES / NO**. *Fade rate* affects the smoothness of brightening and dimming.

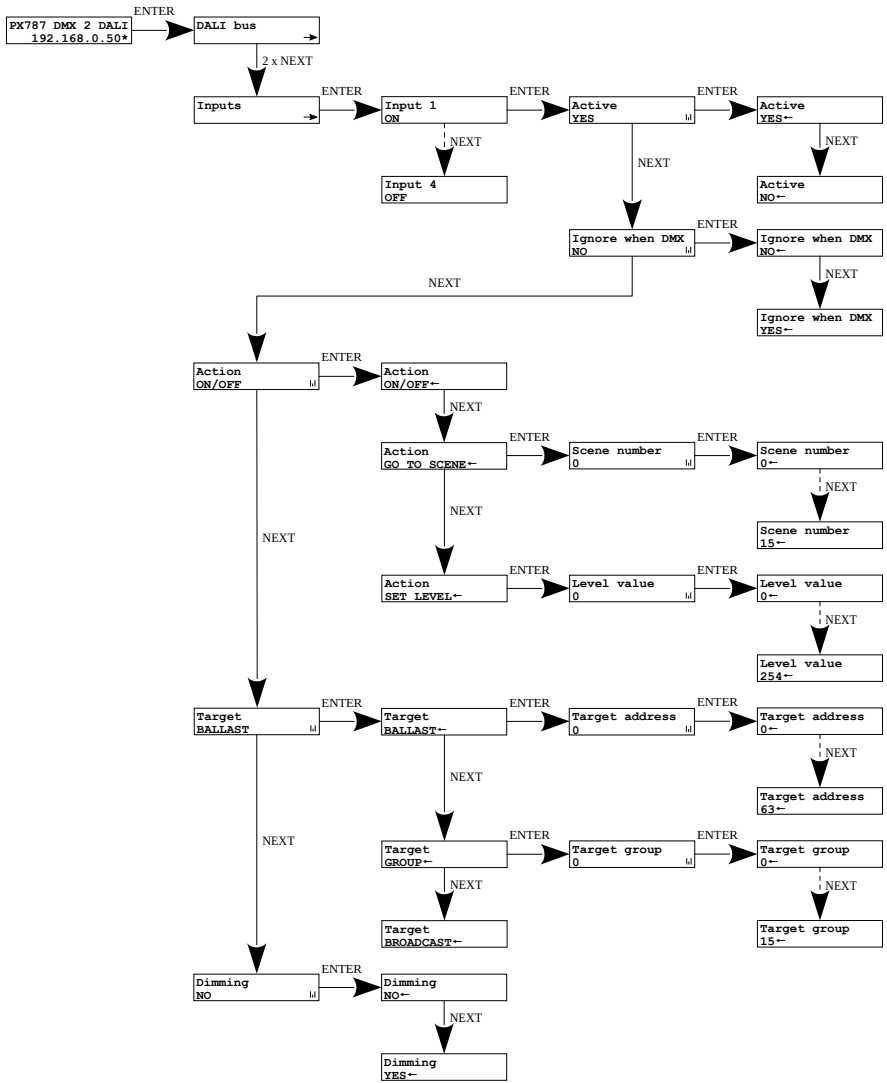


4.6 Converter network settings

PX787 gives you the ability to change network settings in the *Network config.* menu. The following parameters can be changed: static *IP address*, *Subnet mask* (subnet mask edited by changing the CIDR in the range of 1 – 30), default *Gateway address* and enabling *On* or disabling *Off* support *DHCP*.

If DHCP is **turned off**, the converter works according to the static network configuration. If DHCP is **turned on**, the converter will start up using static settings, but will attempt to acquire new network configuration from the DHCP server.

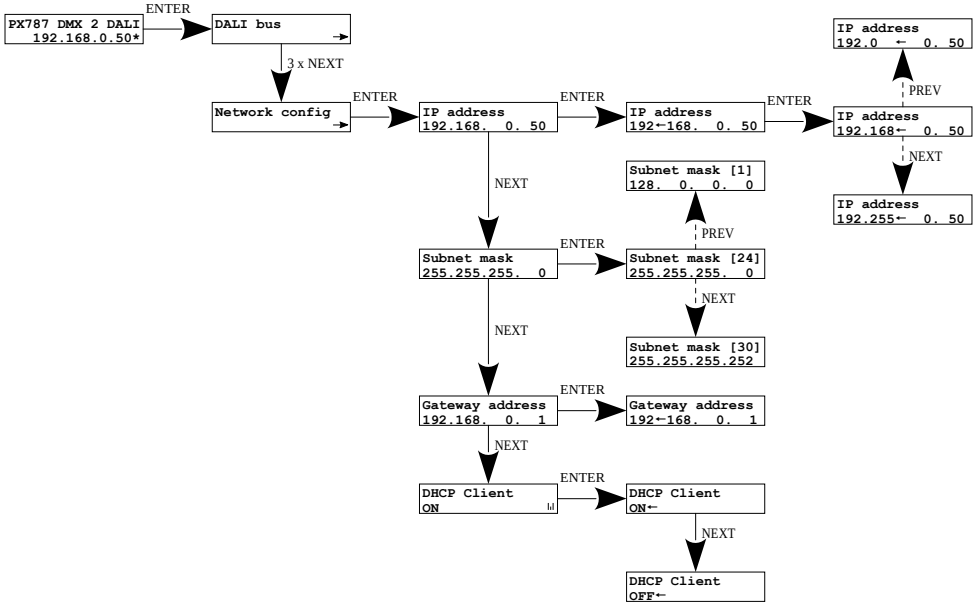

NOTE! After making changes to the network settings, restart the device in the **Management** menu by selecting **Reboot device** – according to the diagram below. The device will restart.

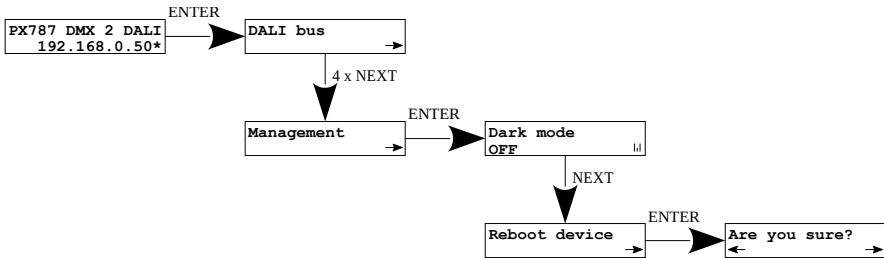


When the user selects this option, **Are you sure?** appears on the display. Pressing the ✓ button will confirm the selected option and the device will execute it, while pressing the ✕ button will exit the selected restart option.

4.7 Other parameters

The menu containing other **Management** settings allows to turn **ON** or **OFF** the screen and **Dark mode** indicator diodes, **Reboot device**, restore **Factory defaults** and set the device lock using a PIN code.


4.7.1 Dark mode

When **Dark mode** is turned on, after 10 seconds of inactivity, the display and indicator lights turn off. The device continues to work without interfering with other parameters. To restore the backlight, press any key.

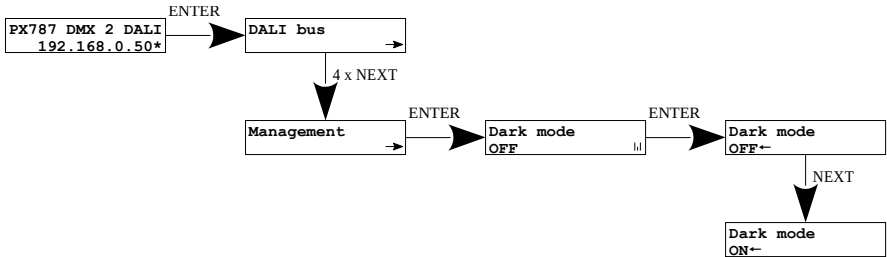

4.7.2 Reboot the device

Reboot device is available, which should be used after making network changes to the device via the built-in LCD and buttons.

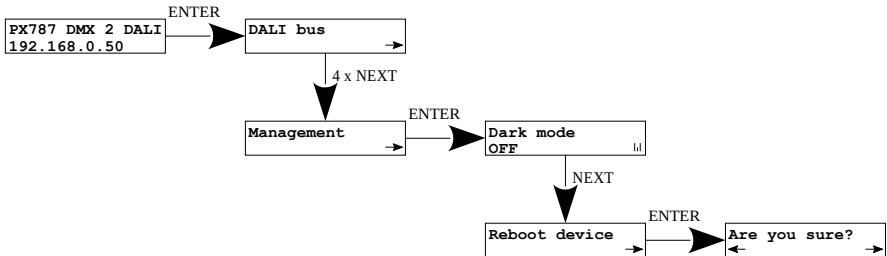


When the user selects this option, the query **Are you sure?**. Pressing the ✓ button will confirm the selected option and the device will execute it, while pressing the ✕ button will exit the selected restart option.

4.7.3 Restore default settings

To restore the default settings, go to the **Management** menu and then select **Factory defaults**. When restoring factory settings the device will be restart and following changes will be made to the device:

- **IP address:** 192.168.0.50
- **Subnet mask:** 255.255.255.0
- **Gateway address:** 192.168.0.1
- **DHCP:** ON
- **No DMX signal:** HOLD
- **Frame priority:** 1
- **Dark mode:** OFF
- **Input 1 – 4:** OFF
- removing the device's PIN protection
- clearing the DALI line addressing settings table
- deleting saved ballasts from the list

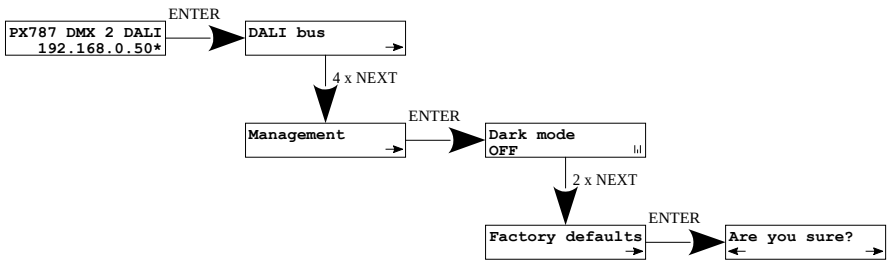


When the user selects this option, the query **Are you sure?** appears on the display. Selecting the ✓ button will confirm the selected option and the device will execute it, while pressing the ✕ button will exit the selected option of restoring factory settings.

Additionally, the user can restore factory settings by holding the *Prev* button for 4 seconds when turning on the power.

4.7.4 PIN code protection


The user can protect their device with a PIN by setting it in the **Set PIN Code** menu and then setting **Protect by PIN** to **YES**. The PIN code can be set in the range 000000 – 999999.

To deactivate PIN protection, set **Protect by PIN** to **OFF**.

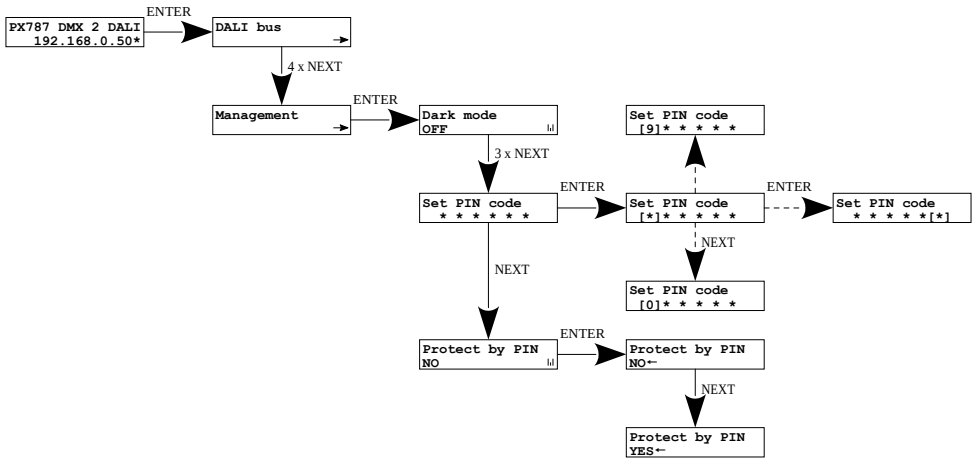


NOTE! If the user enables protection of the device with the PIN **Protect by PIN** code, but does not set his own code **Set PIN code**, the device will be protected with the default PIN code – **108000**.


4.8 Setting the display contrast

If the device has a problem with the readability of messages displayed on the screen, it is possible to change its settings. To do this, press the ~10x **X** button. The contrast can be set in range from 0 to 63. If the screen is illegible and only “” characters are visible or the screen is completely white. Being in the contrast menu is signaled by alternating **green** and **blue** diodes blinking.

With the **↓** / **↑** find the appropriate value (it is recommended to press the **↑** key to find the value in which the screen becomes readable, and then use the **↓** / **↑** keys to adjust the value to suit your needs). To exit **LCD contrast** menu, press the **✓** key.

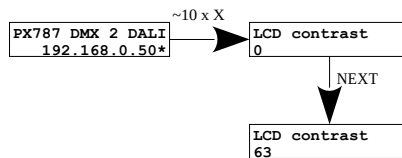

4.9 Menu scheme in PX787

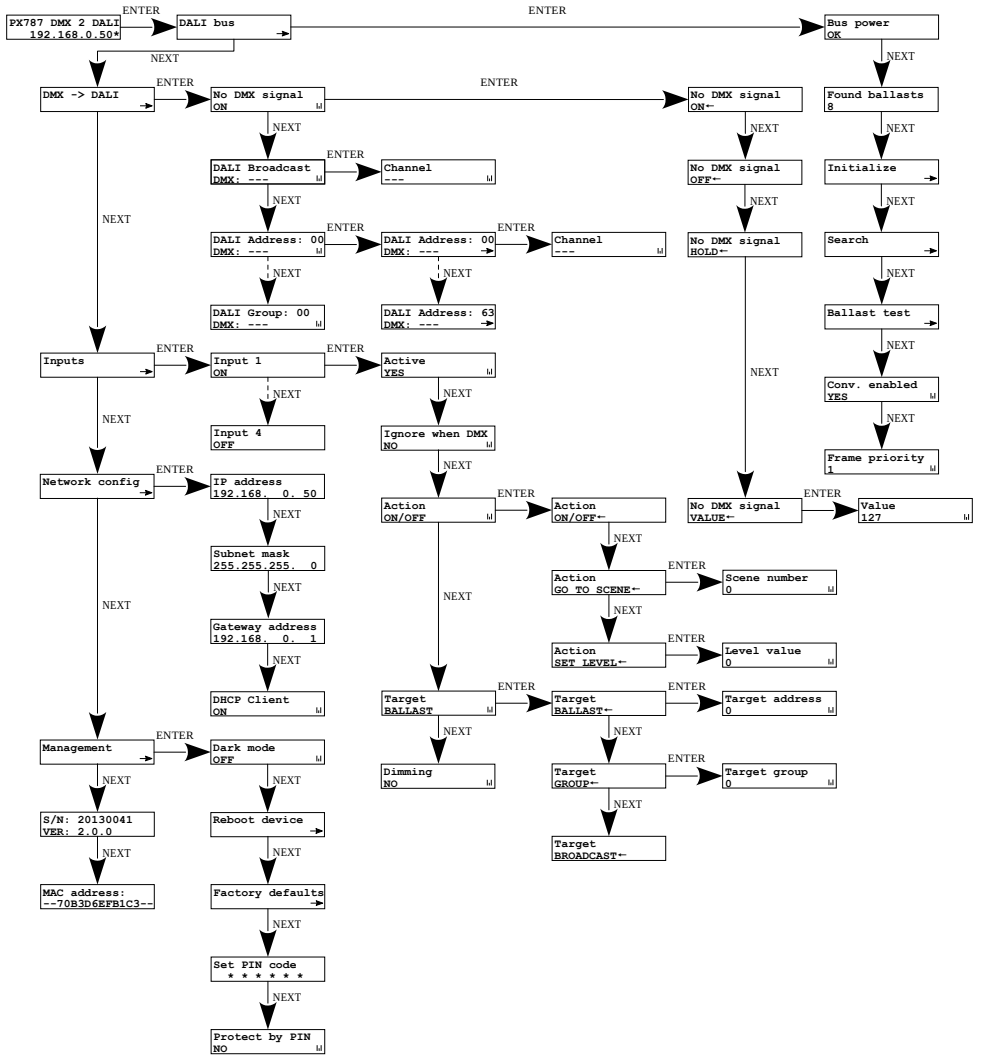

5 Connecting to the PC

The module has a built-in Web Server, which allows to change all settings via a web browser. To use the web interface, it is necessary to connect the PX787 module to a computer.

In automatic mode (DHCP), after connecting to the network the converter attempts to get the network configuration from a DHCP server (e.g router). Thanks to this, manual configuration of networks parameters is not needed. In the absence of a DHCP server on the network the converter will operate according to the static configuration (manual setup). When selecting static addressing, configure the network parameters so that the PX787 works in the same subnet as the computer and that there is no conflict of IP addresses (devices must have unique IP addresses in the network).

If the converter obtained the IP address from the DHCP server, unplugging the network cable will cause the loss of the assigned IP address. If PX787 is reconnected to the network, it will try to get a new address from the DHCP server, if it fails to receive the address, it will work according to the saved static settings.


It is recommended to use automatic addressing and connect the converter to the network with a running DHCP server


If the converter is connected directly to the computer (no DHCP server), it is necessary to manually set the network parameters of both the computer and PX787 so that they work in one network and connect the devices with a crossover Ethernet cable.

5.1 Change of the computer network configuration


The procedure for changing the computer network configuration varies depending on the operating system. Windows® 7 system is an example here.

Change of the computer network configuration in the Windows® 7 operating system is done in the following:

1. Click **[Start]** 
2. Select **[Settings]** tab

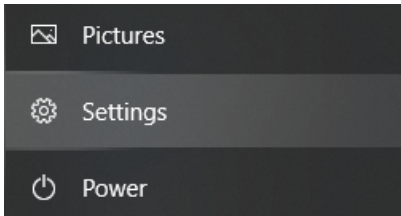


3. Go to **[Network & Internet]** tab




4. Select **[Advanced network settings]**


Advanced network settings



5. Right-click on the appropriate connection, for example it could be **[Ethernet]** and select **[Properties]**




6. In the new window that appears, select **[Internet Protocol Version 4 (TCP/IPv4)]** and then press properties

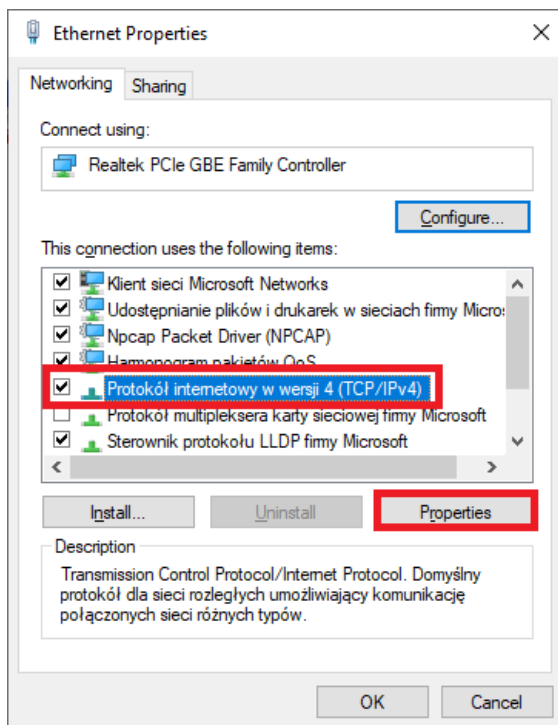

7. In the next window, select [Use the following IP address:]


To connect directly (computer – driver) with a controller that has a default configuration, use the sample settings:

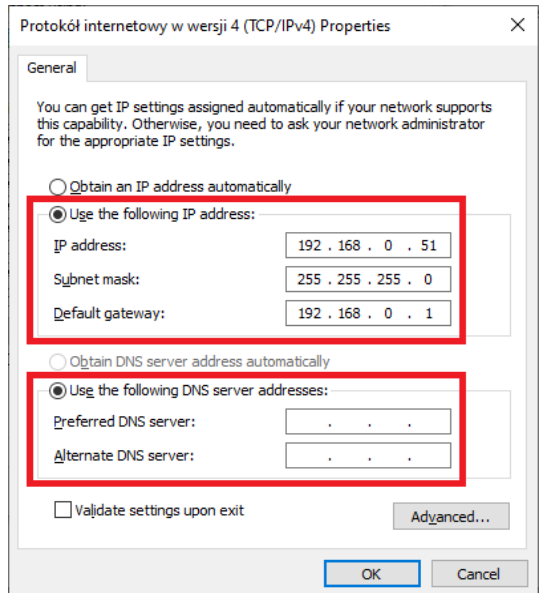

IP address: 192.168.0.51
Subnet mask: 255.255.255.0
Default gateway: 192.168.0.1

5.2 Connecting converter directly to the PC

When connecting the converter directly to a computer it is recommended to use a braided cable. Newer network cards will work both on a braided cable or a non-braided cable, but older ones may require a braided cable.

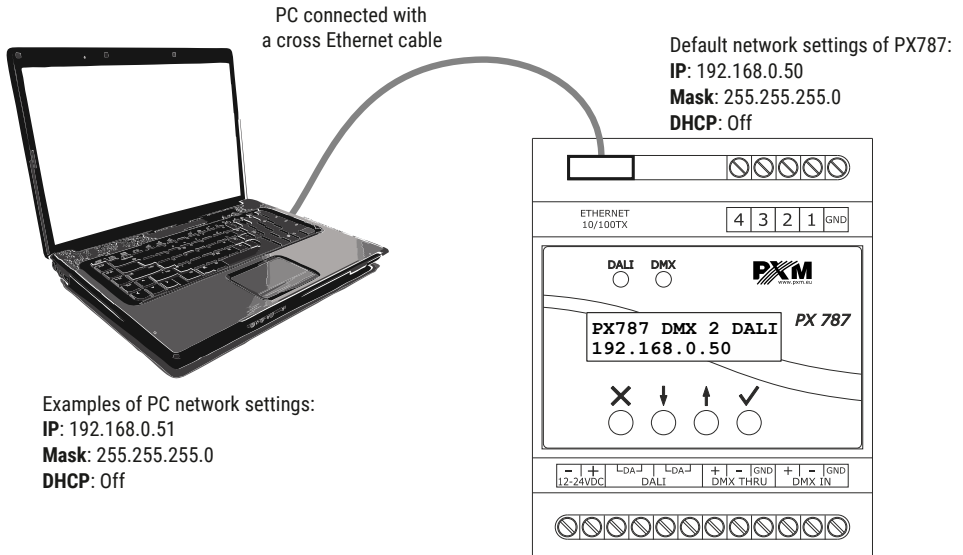

NOTE! Remember that the PX787 converter and the computer should be in the same network and there is no conflict of IP addresses.


5.3 Connecting the converter using a router

When connecting the converter to the router, there are two options for network settings. The first of these is the use router with a DHCP server running, the network configuration on all devices in the network is set automatically. The second option is to connect the converter and PC to a switch or router that does not support DHCP server, in this case all devices in

the network must have manually configured network settings in such a way that each device operates in the same network and has a unique IP address.

5.3.1 Automatic addressing

The diagram below shows the connection of the device with the router on which the DHCP server operates:

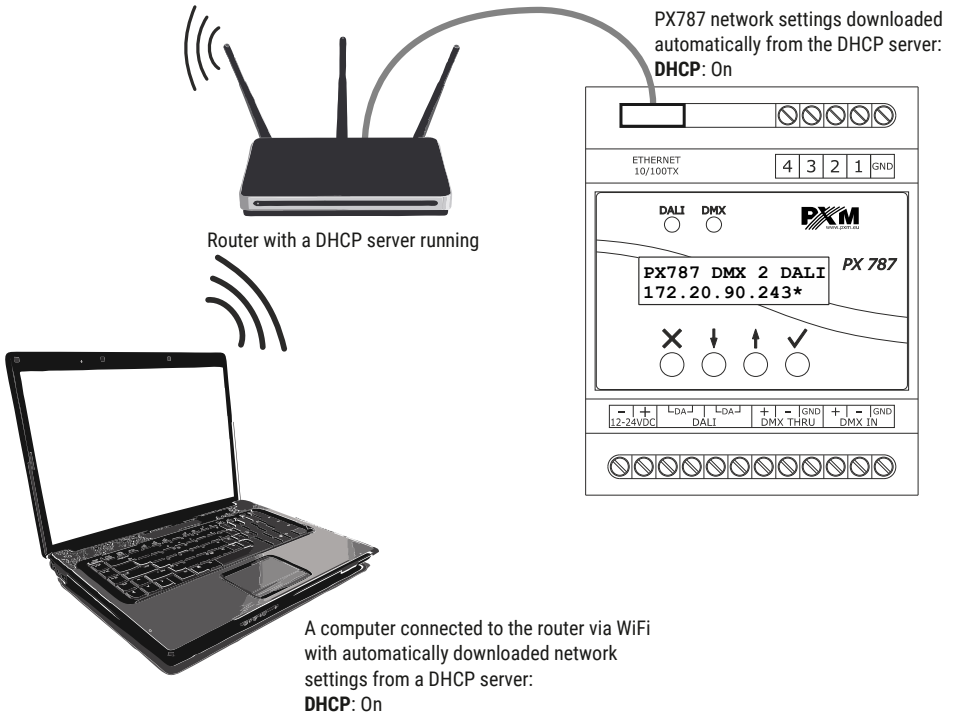


5.3.2 Static addressing

Below is an example diagram of network settings of the converter, router and PC, in the case when the DHCP server in the network is not running:


Router with DHCP server disabled:

IP: 192.168.0.1
Mask: 255.255.255.0
DHCP: Off

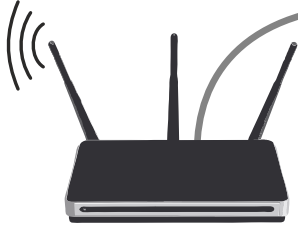

PX787 network settings:

IP: 192.168.0.50
Mask: 255.255.255.0
Gate: 192.168.0.1
DHCP: Off

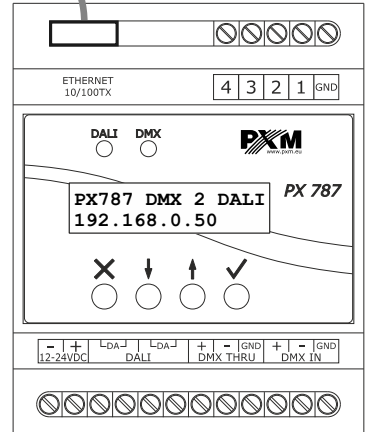

Examples of network settings
of a PC connected to the router via WiFi:
IP: 192.168.0.51
Mask: 255.255.255.0
Gate: 192.168.0.1
DHCP: Off

The advanced converter connection from the external network is described in section 7. Remote connection.

6 WWW interface


The device has a built-in Web Server that starts with the device. To open the PX787 management panel, enter the device's IP address in the browser (default is 192.168.0.50).

NOTE! Pay special attention if the PX787 is in the same network as the device on which the browser is running or in the router there are redirects configured accordingly.

Supported browsers:

- **Google Chrome** – from version 79.0.3945.117
- **Mozilla Firefox** – from version 72.0.2
- **Opera** – from versions 66.0.3515.44
- **Edge** – from versions 79.0.309.71

6.1 WWW window structure

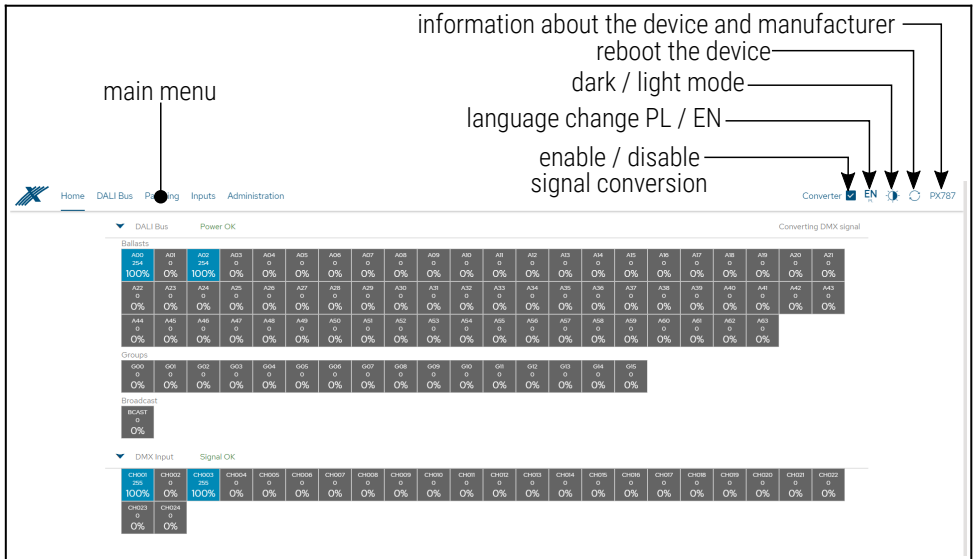


The following tabs are available in the *main menu*:

- **Home** – graphic representation of all DALI output channels and all DMX input channels,
- **DALI Bus** – displays all found ballasts, in this tab it is possible to edit their parameters (if signal conversion is disabled),
- **Patching** – the tab responsible for addressing DALI channels, groups and broadcast channel on individual DMX input channels,
- **Inputs** – configuration of digital inputs,
- **Administration** – is used for local device name changes, network settings and software updates.

The following options are in the upper right corner:

- turning on / off DMX → DALI signal conversion,
- language change (EN / PL),
- dark / light mode switching,
- restarting the device,
- device and manufacturer information:

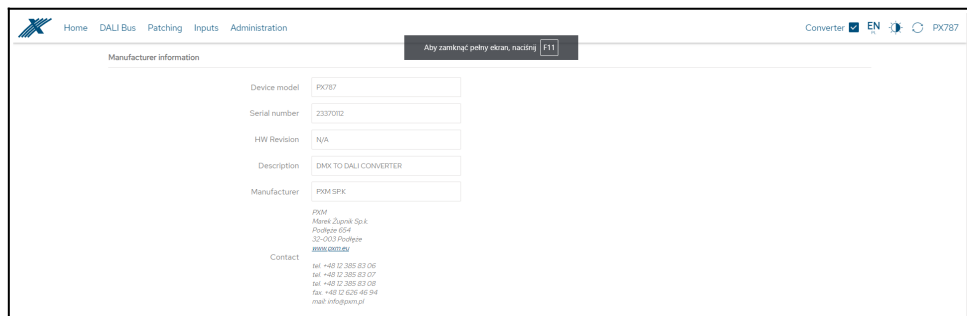

The screenshot shows a web interface with a navigation menu at the top: Home, DALI Bus, Patching, Inputs, Administration. On the right, there are controls for 'Converter' (checked), 'EN' language, a refresh icon, and 'PX787'. A dark notification box in the center reads 'Aby zamknąć pełny ekran, naciśnij [F11]'. The main content area is titled 'Manufacturer information' and contains a table with the following data:

Device model	PK707
Serial number	2337012
HW Revision	N/A
Description	DMX TO DALI CONVERTER
Manufacturer	PDM SPK

Below the table, the manufacturer's contact information is listed:

PDM
Marek Zupnik Sp. z o.o.
Prulbice 65A
32-003 Prulbice
www.pdm.pl

Contact
tel: +48 12 265 83 06
tel: +48 12 265 83 07
tel: +48 12 265 83 08
fax: +48 12 265 46 94
mail: info@pdm.pl

6.2 Preview of DALI and DMX channels

After entering the converter website, the first tab is *Home*. In this tab you can read:

- DALI line status (*Power OK / No power*),
- DMX line status (*Signal OK / No signal*),
- values sent on the DALI line to all possible available 64 devices, 16 groups and on the broadcast address (*Broadcast*),
- values received at the DMX input from all received channels.

The screenshot displays the 'Home' tab of a converter website. The navigation menu includes 'Home', 'DALI Bus', 'Patching', 'Inputs', and 'Administration'. The main content area is divided into two sections: 'DALI Bus' and 'DMX input'. The 'DALI Bus' section shows a 'Power OK' status and a table of 64 DALI outputs, each with a '0%' value. Below this is a 'Broadcast' section with a '0%' value. The 'DMX input' section shows a 'Signal OK' status and a table of 32 DMX channels, each with a '0%' value. Annotations with arrows point to the 'Power OK' status, the DALI output table, the 'Signal OK' status, and the DMX channel table. A copyright notice at the bottom reads 'Copyright by PMM Marek Zapnik Sp. s.'.

DALI line status with line power supply information

DMX line status

DALI outputs, groups and broadcast address

DMX signal input

Copyright by PMM Marek Zapnik Sp. s.

6.3 DALI Bus

The *DALI Bus* tab allows to manage found ballasts on the DALI line. It is possible to quickly search for devices or initiate a search for devices that were not previously in the PX787 memory. Changing the DALI ballast parameters and searching for them is possible only when the DMX → DALI signal conversion is disabled.

The screenshot shows the 'DALI Bus' management interface. At the top, there are navigation tabs: Home, DALI Bus, Planning, Inputs, Administration. Below the navigation is a 'DALI line priority' section with a 'Power ON' button. The main area is titled 'Found ballasts' and displays a table of ballast devices. Each row represents a ballast with columns for 'type of DALI devices found', 'DALI line status (power supply)', and 'DALI device address'. The table includes columns for 'Status', 'Brightness', and 'Group'. To the right of the table is a 'Operations' panel with buttons for 'Refresh', 'Search', 'Select all', 'Deselect all', 'Deaddressing', 'Restore factory settings', 'Paste copied settings', 'Switching on ballasts to 100%', and 'Disabling ballasts'. Annotations with arrows point to various elements: 'type of DALI devices found' points to the first column; 'DALI line status (power supply)' points to the second column; 'DALI device address' points to the third column; 'statuses' points to the 'Status' column; 'current value on the ballast' points to a slider in the first row; 'groups to which the device is assigned' points to the 'Group' column; 'actions for individual ballasts' points to the 'Operations' panel; 'custom device name' points to the 'BALLAST' label in the first row; 'refreshing the list with found ballasts' points to the 'Refresh' button; 'searching for devices again (assigns new DALI addresses)' points to the 'Search' button; 'selecting all ballasts' points to the 'Select all' button; 'deselecting all ballasts' points to the 'Deselect all' button; 'deaddressing DALI ballasts (applies only to selected ones)' points to the 'Deaddressing' button; 'restoring ballast factory settings (applies only to selected ones)' points to the 'Restore factory settings' button; 'pasting the copied settings to the selected ballasts' points to the 'Paste copied settings' button; 'switching on ballasts to 100% (applies only to selected ones)' points to the 'Switching on ballasts to 100%' button; and 'disabling ballasts (applies only to selected ones)' points to the 'Disabling ballasts' button.

Description of displayed parameters:


- **DALI Bus** – if the line is powered from an external source and works correctly, the message **Power OK** is displayed, in the event of a power failure of the DALI line the message **No power** is displayed,
- **Bus priority** – determines the priority of the device sending a signal on the DALI line when there are many such devices in the network. Setting in the range 1 – 5, where 1 is the highest priority.
- **Type of ballast found** – type of ballast found (*Fluorescent lamp, Emergency lighting, Discharge lamp, Low Voltage Halogen, Supply Voltage Regulator, DALI to 0-10V, LED Module, Relay, Color control, Sequencer*),
- **Groups** – group numbers to which the ballast is assigned,
- **Address** – address to which the ballast is assigned,
- **Name** – custom ballast name (saved locally),
- **Actual level** – power with which the ballast is currently working,
- **Actions** – advanced ballast settings,
- **Initialize** – re-search for devices on the line (this involves changing the DALI address settings and deleting the non-standard name of previously configured devices),
- **Search** – searching for devices on the line without changing device addresses,
- **Refresh list** – refreshes the list of found DALI devices,
- **Select all** – selects all devices,
- **Deselect all** – deselects all devices,


- **Remove address** – deleting the DALI addresses assigned to all selected ballasts,
- **Reset** – resets selected devices to factory ballast settings,
- **Paste settings** – pastes the settings previously copied to the marked ballasts (more information in chapter 6.3.2 Copy settings),
- **Turn Off** – disables selected ballasts,
- **Turn On** – turns on selected ballasts at 100%.



NOTE! After connecting the PX787 to the existing installation (the ballasts are addressed), select the **Search** option – it will not change the ballasts addresses. If the ballasts in the installation do not have assigned addresses – select the **Initialize** option.


6.3.1 Actions available for ballasts

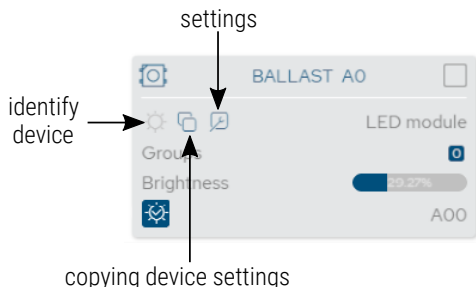For each device found on the DALI line via PX787 it is possible to select an action.



- **Identify device**  – when pressed, the device brightens and dims, enabling identification – the duration is ~10s (works only with DALI 2-compatible devices),

- **Copy settings**  – copies settings, which can then be pasted into selected devices (for more information see chapter 6.3.2 Copy settings),
- **Edit options**  – goes to the ballast parameters configuration.

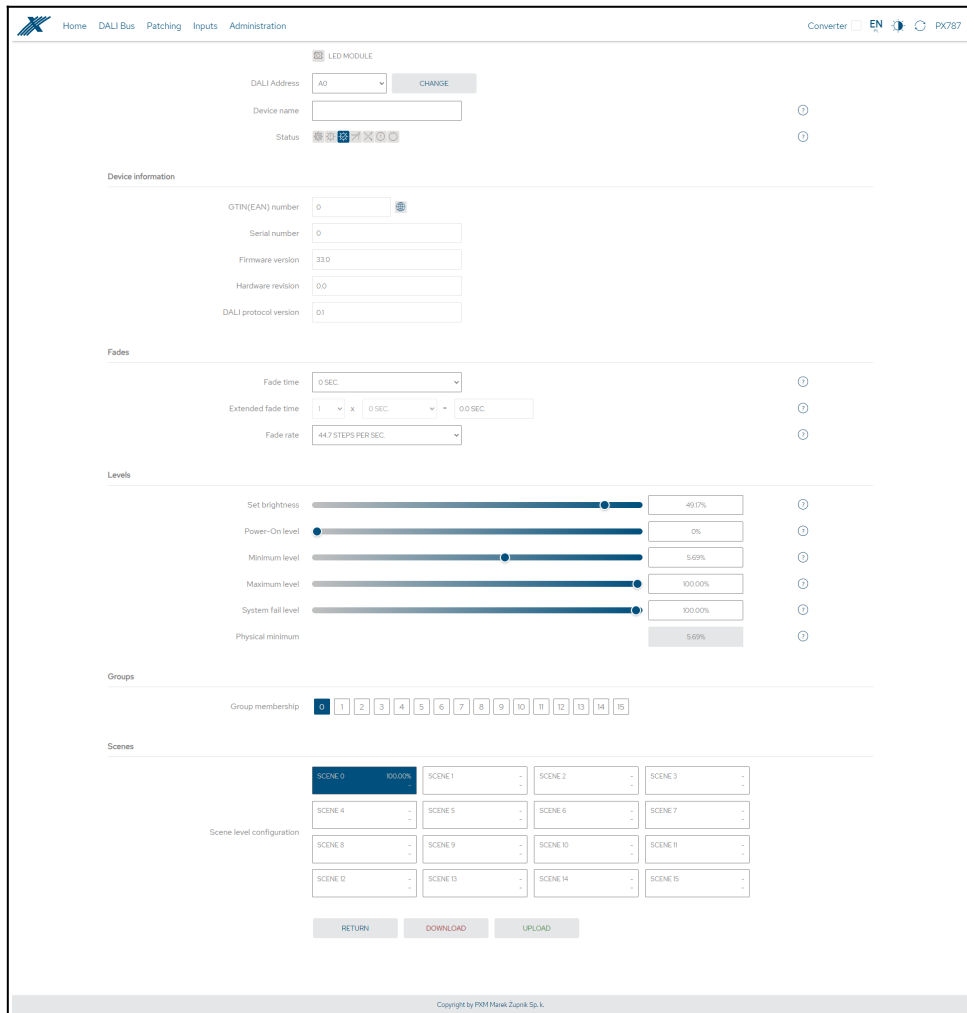

The screenshot displays the configuration page for an LED MODULE. At the top, there are navigation links: Home, DALI Bus, Patching, Inputs, and Administration. On the right, it shows 'Converter: EN', a refresh icon, and 'PX787'.

The main configuration area is titled 'LED MODULE' and includes the following sections:

- Basic Settings:** DALI Address (dropdown menu showing 'A0' and a 'CHANGE' button), Device name (text input field), and Status (a row of icons for various status indicators).
- Device information:** OTIN(EAN) number, Serial number, Firmware version (22.0), Hardware revision (0.0), and DALI protocol version (01).
- Fades:** Fade time (dropdown menu showing '0 SEC.'), Extended fade time (dropdown menu showing '1 x 0 SEC.' and '+ 0.0 SEC.'), and Fade rate (dropdown menu showing '44.7 STEPS PER SEC.').
- Levels:** A series of sliders and percentage boxes for: Set brightness (49.17%), Power-On level (0%), Minimum level (5.69%), Maximum level (100.00%), System fall level (100.00%), and Physical minimum (5.69%).
- Groups:** Group membership (a row of buttons numbered 0 to 15, with button 0 selected).
- Scenes:** Scene level configuration (a grid of buttons for SCENE 0 to SCENE 15, with SCENE 0 selected and showing 100.00%).

At the bottom of the interface, there are three buttons: RETURN, DOWNLOAD, and UPLOAD. The footer contains the text 'Copyright by PXM Morsk Zapnik Sp. s.'.

Available parameters of DALI devices:


- **Light source type** – information on the type of ballast (*Fluorescent lamp, Emergency lighting, Discharge lamp, Low Voltage Halogen, Supply Voltage Regulator, DALI to 0-10V, LED Module, Relay, Color control, Sequencer*),
- **DALI Address** – device address on the DALI line, to change it, click the *Change* button,
NOTE! If a device with such an address already exists on the DALI line, the addresses will be swapped.
- **Device name** – individual ballast name, the name is stored in the PX787 memory,
- **Status** – ballast information (ballast error, light source error, light source on, brightness range error, transition in progress, ballast reset, power restored),
- **GTIN(EAN) number** – ballast identification number,
- **Serial number**,
- **Firmware version**,
- **Hardware revision**,
- **DALI protocol version**,
- **Fade time** – time determining the speed of transition between brightness levels,
- **Extended fade time** – time that determines how quickly it changes between user-defined brightness levels,
- **Fade rate** – concerns the speed of brightening and dimming when holding an external button configured in the *Inputs* tab.

- **Set brightness** – brightness level for which the ballast is to be set in the range 0 – 254,
- **Power ON level** – default brightness after turning on the ballast in the range 0 – 254 or LAST – if the ballast supports the memory function,
- **Minimum level** – minimum ballast brightness,
- **Maximum level** – maximum ballast brightness,
- **System fail level** – ballast brightness in case of DALI line failure in the range 0 – 254 or LAST – if the ballast supports the memory function,
- **Physical minimum** – minimum brightness level factory set in the ballast,
- **Color control settings** – changing color control settings – only applies to DALI devices that have the color temperature change function,
- **Groups** – assigning ballast to selected group / groups,
- **Scenes** – scene brightness level. Click on the selected scene tile, then select that the scene should be *Enabled* and set the *Brightness* in [%].

The image shows a 'Scene settings' dialog box with the following elements:

- Title bar:** 'Scene settings' with a close button (X) on the right.
- Enabled:** A checkbox that is checked with a blue square.
- Brightness:** A horizontal slider bar with a blue gradient. The slider is positioned at the far right, and a text box next to it displays '100.00%'.
- Buttons:** Two buttons at the bottom: 'CANCEL' (in red text) and 'APPLY' (in green text).

If the device supports changing the color temperature, then additional color control settings are available:

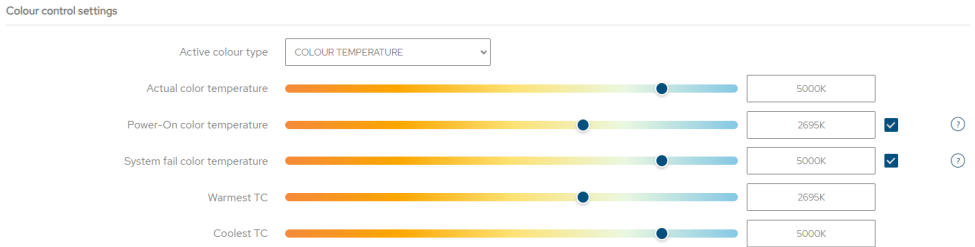

- **Active colour type** – the PX787 device currently only supports *Color Temperature*,
- **Actual color temperature** – color temperature to which the ballast is to be set in the range of 1000 – 20000K,
- **Power-On color temperature** – default color temperature after turning on the ballast (it is possible deactivate this option),
- **System fail color temperature** – ballast color temperature in case of DALI line failure (this option can be deactivated),
- **Warmest TC** – limit of the range of color temperature control via DMX, e.g.: by setting the value to 4500K, the DMX value 0 will be responsible for this color temperature,
- **Coolest TC** – limit of the range of color temperature control by DMX, e.g.: by setting the value to 6500K, the DMX 255 value will be responsible for this color temperature,

NOTE! It is possible to set reverse color temperature control via DMX, so that as the DMX value increases, the temperature decreases.



Additionally, the dialog box in which the user defines the *Scene* changes. There is an option to change the color temperature.

Scene settings

Enabled

Brightness 33.55%

Change color temperature


Color temperature 1992K


CANCEL APPLY

NOTE! Changes made can be canceled by selecting the *Return* button. The settings can be downloaded from the ballast by clicking the *Download* button. The changes made should be sent to the device by clicking *Upload*.

6.3.2 Copy settings


The web interface allows you to copy the settings of the configured ballast to other devices on the DALI line. This option speeds up the configuration of multiple ballasts (as long as they have the same parameters).

To do this, you must first configure the device and then select the icon  next to the selected ballast in the *DALI Bus* tab.

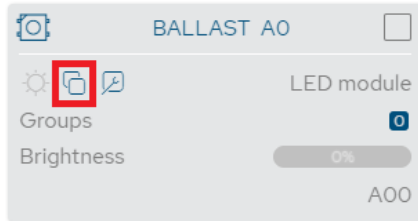


After copying the parameters, select the devices to which they are to be pasted. You can select *Select All* on the right.

Found ballasts

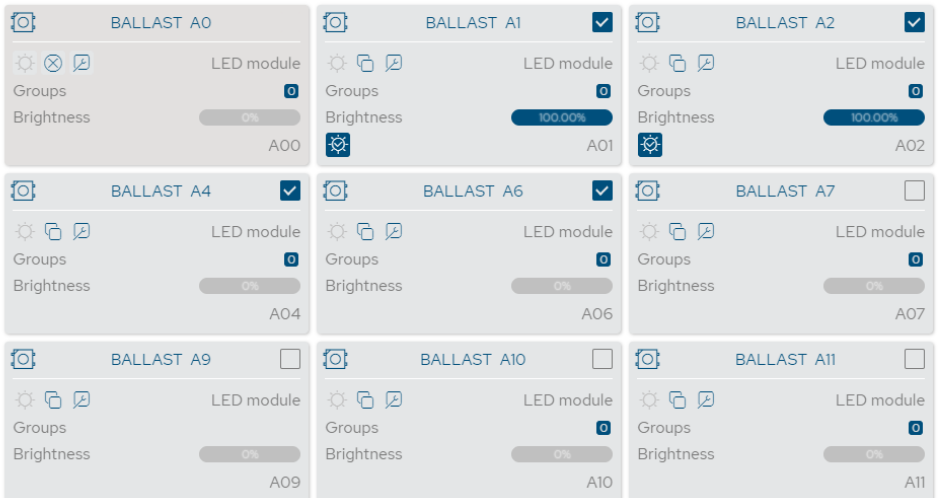


If the parameters have been copied and the devices to which they are to be pasted are selected, the *Paste settings* button becomes active. Selecting *Paste settings* will start the process of copying the settings to the selected ballasts.

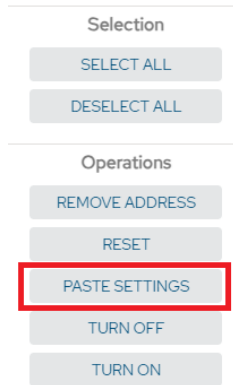

6.4 Patching

This tab is responsible for assigning DALI addresses or groups to specific DMX input addresses, defining the reaction to the loss of the DMX signal and, possibly, setting the DALI broadcast address, which is responsible for sending values to all ballasts.

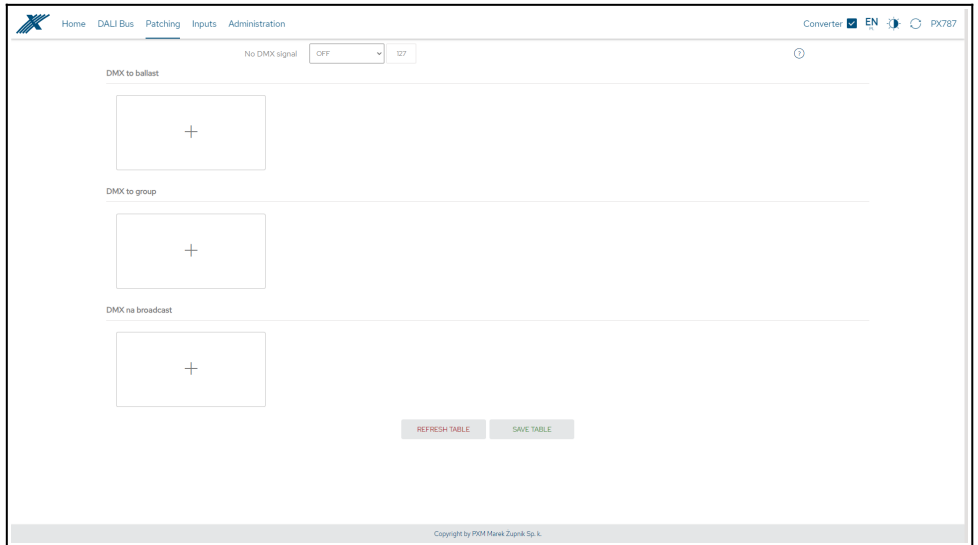

In order to address any DALI address, group or broadcast address, you must first add such a device by clicking the tile with the + icon.

A new window will appear where the user can choose:

- ballast address,
- ballast type,
- control curve:
 - *DALI* – DMX values are converted in a 1:1 ratio to the ballast control level,
 - *Linear* – DMX values are converted linearly into percentages of ballast control,
- DMX channels.

DMX input mapping configuration
✕

Ballast address

Ballast type

DMX drive slope

DMX channels

DMX source channel -

CANCEL
APPLY

By selecting the ballast type as *colour control*, the user can also reverse the control of the DMX channels (by default, the first channel is responsible for the color temperature, and the next one for brightness) and set limits for the DMX-controlled color temperature.

DMX input mapping configuration
✕

Ballast address

Ballast type

Colour control mode

DMX drive slope

DMX channels

DMX source channel - Revert ?

Colour temp. for DMX = 0

Colour temp. for DMX = 255

CANCEL
APPLY

In this tab, it is also possible to react to the disappearance of the DMX signal. The possible behaviors of the converter are:

- **ON** – switching on all ballasts at 100%,
- **OFF** – complete switching off of all ballasts,
- **HOLD** – maintaining the last value of the DMX signal,
- **VALUE** – switching on all ballasts with a value set by the user in the range 0 – 255.

NOTE! After making changes manually or after automatic assigning of addresses and DALI groups to DMX channels, save the changes by selecting the *Save table* button. If the table is saved correctly, a message *Patch table sent to device* will appear at the top of the page.

6.5 Inputs

From the device with the serial number 21030041, support for up to 4 digital inputs is available. Each of the digital inputs in the converter can:

- be turned on or off,
- ignore digital input if DMX signal is received,
- perform one of the three *Actions*:
 - *ON/OFF* – each subsequent press of the button will enable or disable the ballast / group / all ballasts (*Broadcast*) – *Fade time* affects the smoothness of switching on and off. Switching on returns to the state before switching off – memory function.
 - *Set scene* – each subsequent press of the button will turn on or off the given scene in the ballast / group / all ballasts (*Broadcast*),

- *Set level* – each subsequent press of the button will turn on or off the brightness set by the user in the ballast / group / all ballasts (*Broadcast*),
- have enabled the option *Hold down to make it brighter/darker* – holding the button will lighten or darken. *Fade rate* affects the smoothness of brightening and dimming.

The screenshot shows the 'Administration' tab in the DALI Bus software. It displays configuration settings for four inputs:

- Input 1:** Enabled (checked). 'Ignore when DMX signal present' is unchecked. Action is 'TRIGGER SCENE'. For: 'GROUP' (dropdown), '1' (input). Scene: '0' (input). 'Hold down to make it brighter/darker' is checked.
- Input 2:** Enabled (checked). 'Ignore when DMX signal present' is unchecked. Action is 'SET BRIGHTNESS'. For: 'BALLAST' (dropdown), '2' (input). Value: '25' (input). 'Hold down to make it brighter/darker' is unchecked.
- Input 3:** Enabled (unchecked).
- Input 4:** Enabled (unchecked).

At the bottom, there are 'CANCEL' and 'APPLY' buttons. The footer text reads 'Copyright by PHM Haveli Zupnik Sp. s.'.

NOTE! After making changes, save the changes by selecting the *Save changes* button. If it is saved correctly, a message *The changes have been sent to the device* will appear at the top of the page.

6.6 Administration

In this tab the user can:


- change the converter's network settings,
- change its name,
- export and import settings to and from a file,
- change display settings,
- update software.

The screenshot displays the Administration tab with the following sections and annotations:

- Device**:
 - Device name: DMX TO DALI (← custom device name)
 - Serial number: 21302101 (← serial number)
- Network settings**:
 - IPv4: 192 · 168 · 0 · 90
 - Mask: 255 · 255 · 255 · 0 / 24
 - Gateway: 192 · 168 · 0 · 1
 - DHCP:
 - MAC: 70:83:D5:EF:B8:CC
 - (← network settings)
- LCD settings**:
 - Energy saving: (← enabling Dark mode)
 - Device protection:
 - PIN:
 - Confirm PIN:
 - (← PIN settings)
 - CANCEL / APPLY buttons
- Configuration**:
 - Restore factory defaults: RESTORE (← restoring factory settings)
 - Configuration file: EXPORT / IMPORT (← importing or exporting a file with the converter configuration)
- Firmware**:
 - Firmware version: 3.0.0 (UPGRADE) (← software update)
 - Bootloader version: 0.6.180

Available options:

- **Device name** – custom device name set by the user,
- **Serial number**,
- **IPv4** – setting the IP address,
- **MAC** – individual MAC address of the network card,
- **Mask** – setting the subnet mask,
- **Gateway** – default gateway setting,
- **DHCP** – enable or disable DHCP support,

NOTE! After making any changes to network settings, restart the device (button .

- **Energy saving** – turning off the screen and indicator lights after 10 seconds,
- **Secure the device** – the user can protect the device with a PIN code (6 digits – default 108000), after activation of the protection, entering the PIN code is required on the website and LCD screen,
- **Factory settings:**
 - **IP address:** 192.168.0.50
 - **Subnet mask:** 255.255.255.0
 - **Gateway address:** 192.168.0.1
 - **DHCP:** ON
 - **No DMX signal:** HOLD
 - **Frame priority:** 1
 - **Dark mode:** ON
 - **Input 1 – 4:** OFF
 - **removing the device's PIN protection,**

- **clearing** the DALI line address settings **table**,
- removing from the list of saved ballasts.

By selecting *Export* you can save the settings of network settings, DALI line addressing and digital inputs to a file, by clicking *Import* you can load the configuration from the file.

Software update is possible after selecting the *Upgrade* button and then selecting the update file.

7 Remote connection

The converter allows to log in to device from an external network via the internet, for this purpose it should be:

- have an external IP address on the router assigned by the internet provider and be able to establish connection from outside (incoming packets are not blocked by the provider's and router's firewall),
- redirect port 80 to the IP address of the converter working in the local network (so-called forwarding port),
- unblock selected port in the router's firewall,
- the address of the converter / converters in the local network can not change (the converter must have a static IP address set or the DHCP server must assign the same addresses to the same devices each time).

NOTE! The destination port of the device is always port 80, for added security it is recommended to redirect other ports from the external network to port 80 in the local network.

Example: by sending a query to the external IP address of a router with port number 12345 (e.g. 66.77.88.99:12345), the router will forward this query to the address of the device with port number 80 (e.g. 192.168.0.50:80).

A virtual server defines the mapping from the WAN service port to the LAN server. All requests from the Internet to the designated service port will be redirected to the device specified by the server IP Address.

<input type="checkbox"/>	Service Port	IP Address	Internal Port	Protocol	Status	WAN	Edit
<input type="checkbox"/>	12345	192.168.0.50	80	TCP or UDP	Enabled	pppoe_0_35_3_d	Edit

NOTE! In most routers available on the market, you can set a static IP address by the DHCP server based on the MAC address of the device. For example, for a device with the MAC address 70:B3:D5:EF:B1:60 the IP address 192.168.1.15 will always be assigned by the DHCP server (example below).

Static assignment

IP Address 192.168.1.

MAC address : : : : :

NO.	IP Address	MAC address	Delete
1	192.168.1.15	70:B3:D5:EF:B1:60	<input type="button" value="Delete"/>

Most routers available on the market usually have several parameters in port forwarding options:

- forwarding number,
- port or port range for redirection,
- the IP address of the device to be redirected to,
- protocol type (TCP / UDP or both),
- attach / delete diversion.

7.1.1 One converter in the internal network

Examples of network settings:

- external IP address: 66.77.88.99 (example address)
- converter IP address: 192.168.1.50
- mask: 255.255.255.0
- target device port: 80
- protocol: TCP or TCP/UDP (in this case option "*Both*")

Below is the screen of the example setting in the router:

NO.	Start Port-End Port	LAN IP	Protocol	Enable	Delete
1.	80 - 80	192.168.1.50	Both ▼	<input checked="" type="checkbox"/>	<input type="checkbox"/>
2.	-	192.168.1.	TCP ▼	<input type="checkbox"/>	<input type="checkbox"/>
3.	-	192.168.1.	TCP ▼	<input type="checkbox"/>	<input type="checkbox"/>
4.	-	192.168.1.	TCP ▼	<input type="checkbox"/>	<input type="checkbox"/>
5.	-	192.168.1.	TCP ▼	<input type="checkbox"/>	<input type="checkbox"/>
6.	-	192.168.1.	TCP ▼	<input type="checkbox"/>	<input type="checkbox"/>
7.	-	192.168.1.	TCP ▼	<input type="checkbox"/>	<input type="checkbox"/>
8.	-	192.168.1.	TCP ▼	<input type="checkbox"/>	<input type="checkbox"/>
9.	-	192.168.1.	TCP ▼	<input type="checkbox"/>	<input type="checkbox"/>
10.	-	192.168.1.	TCP ▼	<input type="checkbox"/>	<input type="checkbox"/>

If the router does not have the option to set up one port forwarding, create a range (from 80 to 80). If everything is correctly configured to open the web interface, enter the external IP address in the browser window (e.g. 66.77.88.99) or if you have redirected another port to internal port number 80 (e.g. 66.77.88.99:12345) – described in detail in section 7 More than one converter in the internal network.

Example of connection without using other ports:

Router network settings:


IP: 192.168.1.1

Mask: 255.255.255.0

DHCP: Off

Port 80 forwarding

to the device address (192.168.1.50)

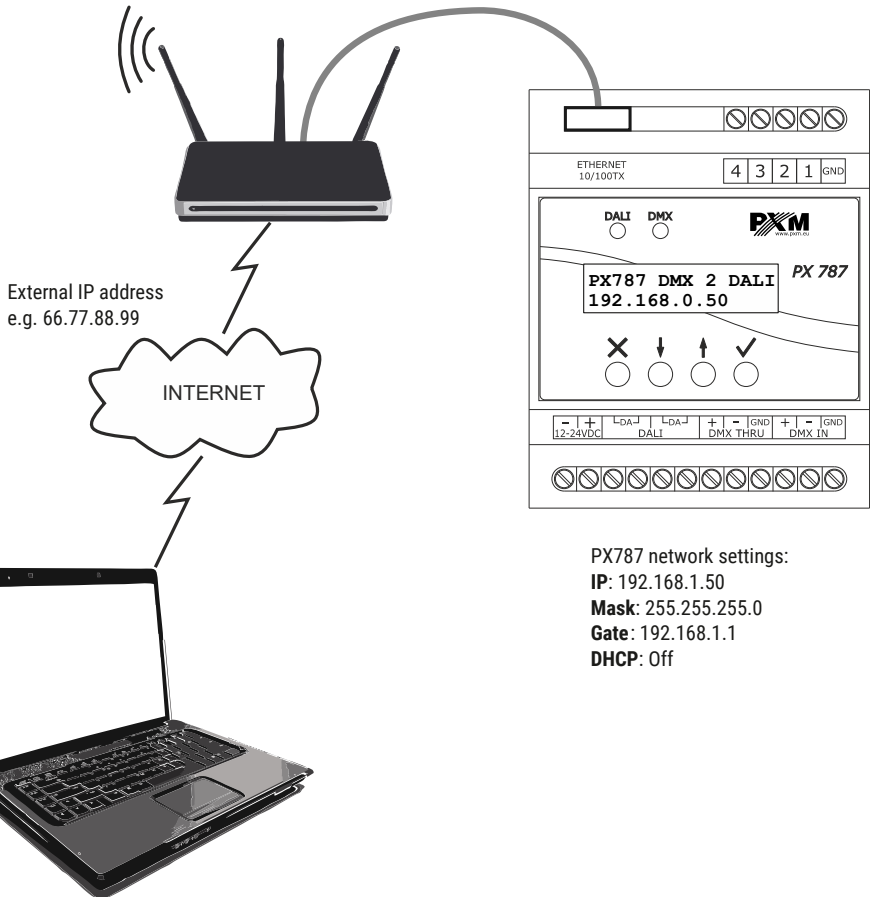

A computer connected to the internet

7.1.2 More than one converter in the internal network

Examples of network settings:

- external IP address: 66.77.88.99 (example address)
- IP address of the first converter: 192.168.1.50
- IP address of the second converter: 192.168.1.51
- mask: 255.255.255.0
- target device port: 80
- protocol: TCP or TCP/UDP (in this case option "Both")

Below is a screen with examples of settings in the router (port forwarding 2000 and 2001 to the appropriate IP address of the converter and port 80):

A virtual server defines the mapping from the WAN service port to the LAN server. All requests from the Internet to the designated service port will be redirected to the device specified by the server IP Address.

<input type="checkbox"/>	Service Port	IP Address	Internal Port	Protocol	Status	WAN	Edit
<input type="checkbox"/>	2000	192.168.1.50	80	TCP or UDP	Enabled	pppoa_0_35_3_d	Edit
<input type="checkbox"/>	2001	192.168.1.51	80	TCP or UDP	Enabled	pppoa_0_35_3_d	Edit

Add New

Enable Selected


Disable Selected

Delete Selected

In this case, port 2000 indicates a device with IP address 192.168.1.50 and sends a query to port 80 in the internal network. The query sent to port 2001 will send a query to the other device with the address 192.168.1.51.

Example of connecting more than one converter with port forwarding:

Router network settings:
IP: 192.168.1.1
Mask: 255.255.255.0
DHCP: Off
 Port 2000 forwarding to the device address (192.168.1.50:80)
 Port 2001 forwarding to the device address (192.168.1.51:80)

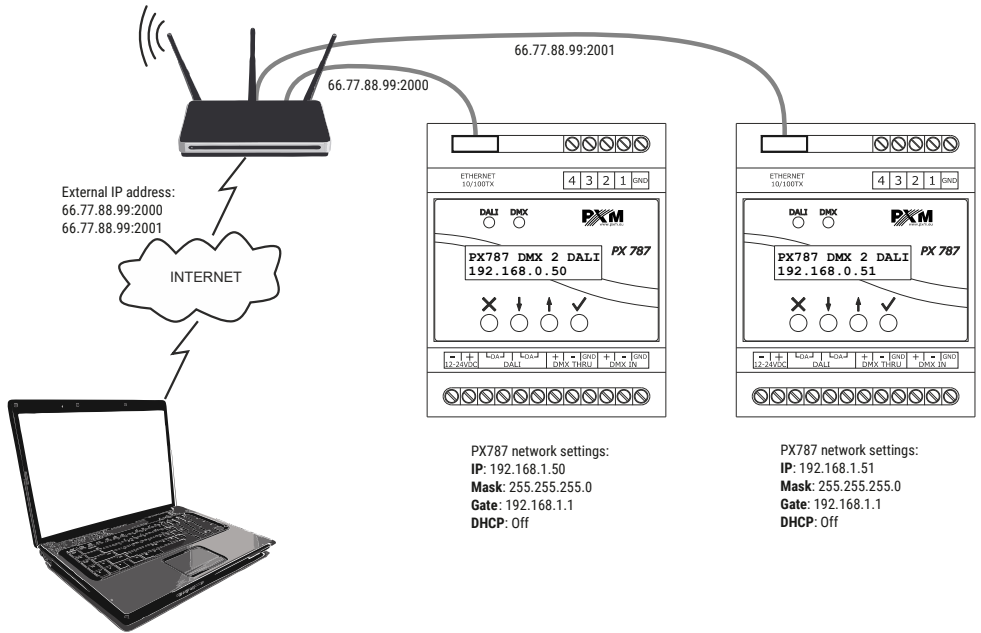

A computer connected to the internet

8 RDM – available parameters

The PX787 supports the DMX – RDM protocol. DMX protocol allows only of a one-way data transmission, while its extension the RDM protocol can transmit information in two directions. This makes possible to simultaneously send and receive information, and hence the possibility of monitoring activities of the compatible devices. Thanks to RDM some available settings of compatible devices may be programmed using this protocol.

List of supported RDM parameters by PX787:

Parameter name	PiD	Description
SUPPORTED_PARAMETERS	0x0050	all supported parameters
PARAMETER_DESCRIPTION	0x0051	description of additional parameters
DEVICE_INFO	0x0060	information concerning the device
SOFTWARE_VERSION_LABEL	0x00C0	firmware version of the device
DMX_START_ADDRESS *	0x00F0	DMX starting address; Range 1 – 512
IDENTIFY_DEVICE *	0x1000	device identification; Two states are possible: identification disabled (value 0x00) and identification enabled (value 0x01)
DEVICE_MODEL_DESCRIPTION	0x0080	device description, e.g. name
MANUFACTURER_LABEL	0x0081	manufacturer description, e.g. name

Parameter name	PiD	Description
DEVICE_LABEL *	0x0082	additional device description; It is possible to enter an additional device description using up to 32 ASCII characters
FACTORY_DEFAULTS	0x0090	device default settings
DMX_PERSONALITY	0x00E0	DMX operational mode
DMX_PERSONALITY_DESCRIPTION	0x00E1	description of individual operational modes
RESET_DEVICE	0x1001	restarting the device
DEVICE_UPTIME	0x8000	time since last power on
SERIAL_NUMBER	0x8010	device serial number
CURRENT_IPV4_ADDRESS	0x8080	current device IP address
CURRENT_IPV4_GATEWAY	0x8081	current gateway address
CURRENT_IPV4_SUBNET	0x8082	current subnet (mask)
ETHERNET_MAC	0x8083	device MAC address
DHCP_ENABLE *	0x8084	DHCP settings; Disabled (value 0x00) and enabled (value 0x01)
STATIC_IPV4_ADDRESS *	0x8085	IP address settings; Text input, e.g. 192.168.1.100
STATIC_IPV4_GATEWAY *	0x8086	gate settings; Text input, e.g. 192.168.1.1
STATIC_IPV4_SUBNET *	0x8087	subnet settings (mask); Text input, e.g. 255.255.255.0

* - editable parameter

9 Indication lights


Converter is equipped with 2 indicators signaling:

Indicator	Action	Function
green ● DALI	flashing / steady on	communication on the DALI line
	is off	the converter does not send any commands on the line
blue ● DMX	flashes	receiving DMX signal
	is off	no DMX signal



10 DMX signal connecting

PX787 have to be connected to DMX line in serial mode, with no branches on DMX control cable. That means that DMX line, from the signal source, must be connected to **DMX IN** pins of PX787 and later, directly from **DMX OUT** pins to the next device in DMX chain.

If the PX787 is the last DMX chain receiver there should be terminator (resistor 120 Ohm) mounted between "+" and "-" pins of **DMX OUT** section.

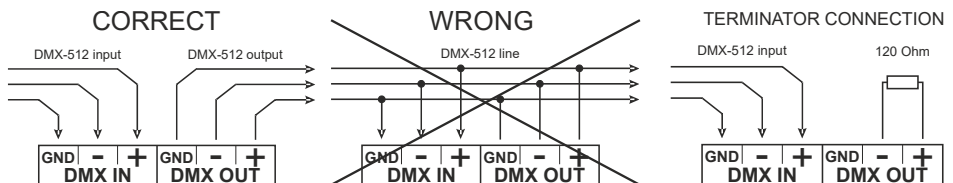

12 Dimensions

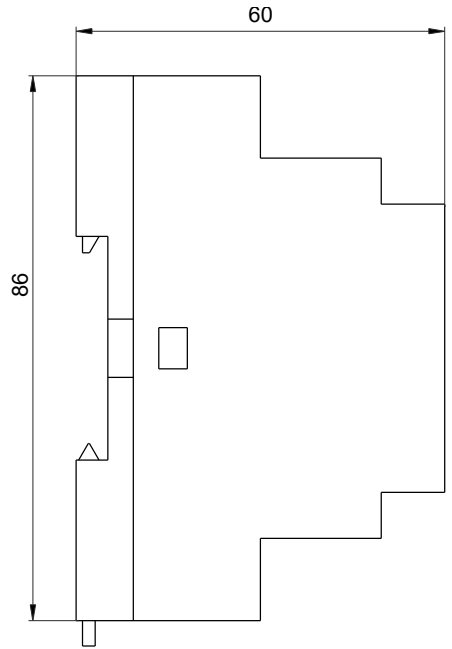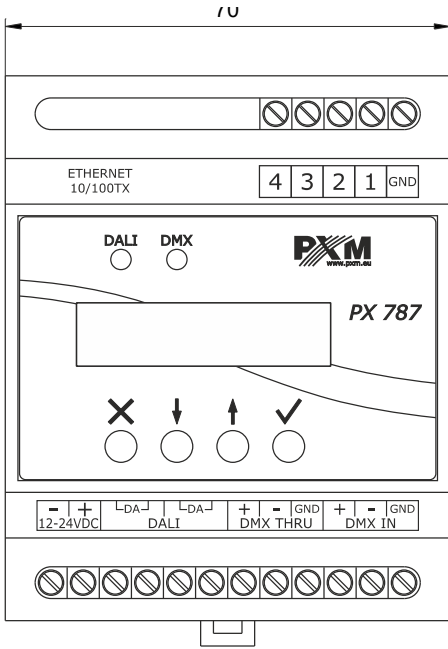

13 Technical data

type	PX787
power supply	12 – 24V DC
power consumption	max. 1W
DMX input / output	1 / 1
DALI ports	1
Ethernet ports	1
outputs to digital buttons*	4
DMX channels	512
supported ballasts	DT0 – DT8
control characteristics	DALI / linear
DALI line test	from the LCD
settings change protection (LCD / Web Server)	yes – PIN (6 digits)
support for RDM protocol	yes
number of supported DALI devices	64
programming	LCD display 2 x 16 and 4 buttons Web Server
version of the DALI protocol	1.0
weight	0.15kg
dimensions	width: 70mm height: 86mm depth: 60mm

* - available from serial number 21030041

DECLARATION OF CONFORMITY

PXM Marek Żupnik spółka komandytowa
Podłęże 654, 32-003 Podłęże

we declare that our product:

Product name: DMX/DALI 1x

Product code: PX787

meets the requirements of the following standards, as well as harmonised standards:

PN-EN IEC 63000:2019-01	EN IEC 63000:2018
PN-EN 62386-101:2015-06	EN 62386-101:2014
PN-EN 62386-102:2015-06	EN 62386-102:2014
PN-EN 61000-4-2:2011	EN 61000-4-2:2009
PN-EN IEC 61000-6-1:2019-03	EN IEC 61000-6-1:2019
PN-EN IEC 61000-6-3:2021-08	EN IEC 61000-6-3:2021

and meets the essential requirements of the following directives:

2011/65/UE **DIRECTIVE OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL** of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment
Text with EEA relevance.

2014/30/UE **DIRECTIVE OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL** of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility (recast)
Text with EEA relevance.


Marek Żupnik spółka komandytowa
32-003 Podłęże, Podłęże 654
NIP 677-002-54-53



mgr inż. Marek Żupnik.